

# Direct Print

Copytech's guide to setting up and using Direct Print

Direct Print is the built in driverless printing feature of Konica Minolta MFDs.



**Time required to enable:** Less than 1minute

**Engineer required:** No

**You may need the Administrator's password to enable Direct Print and you will need the machine's network IP address for printing (if using Web Browser to print).**

## Direct Print- Overview

Direct Print is a useful feature that enables printing to the MFD without installing a print driver, can be used for example by visitors or other temporary users.

There are two methods of Direct Print

1. Printing using the Web Browser interface
2. Printing using a Memory stick (USB)

Please note that only certain file formats are supported by Direct Print. These are: XPS, PDF(Ver1.6), TIFF, PS, PCL, JPEG, Text (also OOXML and PPML on newer models)

### Printing Using the Web Browser Interface

**Ensure that Direct Print is enabled.** (Usually enabled by Default so you may skip this step)

Open Internet Explorer or other web browser

In the address bar enter the IP Address of the MFD and then tap enter

PageScope Web Connection (the machines embedded website) will open at the login screen

Select login as Administrator and then click **Login**

Enter the Administrator password and then click **OK**

Click on the **Print Setting** tab (button is towards top left of screen)

Click on **Direct Print Settings**

Ensure that **PSWC Direct Print** is set to **On**

**Logout**

### To Print

Open Internet Explorer or other web browser

In the address bar enter the IP Address of the MFD and then tap enter

PageScope Web Connection (the machines embedded website) will open at the login screen

Select login as a Public User and then click **Login**

Click on the **Direct Print** tab (button is towards top left of screen)

Set the printing options required such as number of sets

In the **Select File** section, browse for the file to be printed.

Click on **OK**

If printing is successful a message that the File has been transferred will appear. Click on **OK**

### Printing using Memory Stick.

Plug a Memory Stick into the USB port alongside the MFD's screen

The MFD's screen will change to the **External Memory connected** screen

Select **Print a document from External Memory**

Browse the external memory and select file to be printed and touch **Print**